

FIND YOUR WAY



Today's vehicles are more sophisticated than ever and need to be properly maintained to help ensure they operate at the highest level.

**Additional Information Available on the Web @
www.genuineservice.com**

For lots of helpful tips and information on operating, maintaining, and servicing your Ford, Lincoln, or Mercury vehicle, visit www.genuineservice.com. You'll also find the Ask Ford online expert available 24/7 to answer questions, important warranty information, and resources to record your vehicle's service history online, register with us for important updates and specials, and find out what to do if you need roadside assistance.

2 Scheduled Maintenance

*2010 Scheduled Maintenance Guide (smg)
Scheduled Maintenance Guide, 2nd Printing
USA (fus)*



Table of Contents

General Owner's Information2
General Maintenance Information4
Owner Checks and Services8

Keep It Genuine9
Multi-Point Inspection12

Normal Schedule Trucks, Fullsize Vans & SUVs14
 Class A Motorhome, E-Series, Escape, Expedition, Explorer, Explorer Sport Trac, F-150, F-250/350/450/550, Mariner, Mountaineer, Navigator, Ranger and Transit Connect

Normal Schedule Cars & CUVs29
 Crown Victoria, Edge, Focus, Flex, Fusion, Grand Marquis, Milan, MKS, MKT, MKX, MKZ, Mustang, Taurus, and Town Car

Special Operating Conditions41
Exceptions47
Engine Coolant Change Record48

General Owner's Information

Keep It Genuine

Normal Schedule Trucks, Fullsize Vans & SUVs

Normal Schedule Cars & CUVs

Special Operating Conditions & Exceptions

GENERAL MAINTENANCE INFORMATION

Get the most from your vehicle with routine maintenance

Routine maintenance is the best way to help ensure you get the performance, dependability, long life and resale value you expect from your vehicle. This is exactly why we've put together the Scheduled Maintenance Guide. It outlines the services required to properly maintain your vehicle and when they should be performed. The focus is on maintaining your vehicle while it's running great, which goes a long way toward preventing major repairs and expenses later.

Here are a few suggestions to help you get started on the road to routine maintenance:

- Familiarize yourself with your vehicle by going through your *Owner's Guide*.
- Take a few minutes to review this handy Scheduled Maintenance Guide.
- Make it a habit to use this guide to record scheduled maintenance.
- Consider your Ford and Lincoln Mercury Dealership for all your vehicle's needs.

Protect your warranty!

Routine maintenance is not only the best way to help keep your vehicle running great, it's also the best way to protect your warranty. While maintenance and repair services may be performed by you or by any automotive service provider you choose, it is your responsibility to see that all scheduled maintenance is performed and that the materials used meet Ford Engineering specifications. Failure to perform scheduled maintenance specified in this guide will invalidate warranty coverage on parts affected by the lack of maintenance. We can't stress enough how important it is to keep records of all maintenance. This guide will help you do just that. Ford Motor Company will not deny a warranty claim simply because there is no documentation. **However, damage or failures due to neglect or a lack of proper maintenance are not covered under warranty.**

Keeping maintenance records is easy with the Scheduled Maintenance Guide

It's important to document the maintenance of your vehicle. Every time you bring your vehicle in for scheduled maintenance, be sure to present this guide and certify the work. Also record the date of service, mileage at the time of service, and attach your receipt. This will make record keeping easy and, should your vehicle ever require warranty coverage, you will have all the documentation to show you've properly maintained it.

Maintenance Interval

Ford Motor Company establishes recommended maintenance intervals based upon engineering testing to determine the most appropriate mileage to perform the various maintenance services. This protects your vehicle at the lowest overall cost to you. Ford Motor Company recommends that you not deviate from the maintenance schedules presented in this Scheduled Maintenance Guide.

4 Scheduled Maintenance

GENERAL MAINTENANCE INFORMATION

Maximum Oil Change Interval

- Normal Schedule: 7,500 miles or 6 months, whichever occurs first.
- Special Operating Conditions: 5,000 miles, 6 months, or 200 hours of engine operation, whichever occurs first see appropriate schedule on page 41.

Engine Coolant Change Interval

- 6 years or 105,000 miles - change coolant (whichever comes first). Use coolant specified in the *Owner's Guide* in the *Maintenance and Specifications* chapter
- After initial change - change coolant every 3 years or 45,000 miles (see page 48)

General Owner's
Information

Determine which maintenance schedule to follow

It's important to follow the maintenance schedule that most closely mirrors your driving habits and the conditions under which you drive. For this reason, the *Scheduled Maintenance Guide* is divided into two basic maintenance schedules: the *Normal Schedule* (further segmented into *Trucks, Fullsize Vans & SUVs* and *Cars & CUVs*) and *Special Operating Conditions*.

Determining which maintenance schedule is right for you is easy. For the most part, do you drive your Ford, Lincoln or Mercury vehicle under typical, everyday conditions? If so, follow the *Normal Schedule Trucks, Fullsize Vans & SUVs*, or *Normal Schedule Cars & CUVs*.

Special Operating Conditions

However, if one or more of the Special Operating Conditions outlined below better describes how you typically operate your vehicle, you will need to perform some maintenance services more often than the Normal Schedule recommends.

- Towing a trailer or carrying heavy loads
- Extensive idling and/or driving at low-speeds for long distances
- Driving in dusty conditions
- Off-road operation
- Use of E85 fuel 50% of the time or greater (flex fuel vehicles only)

Important: For further details and information regarding these Special Operating Conditions see page 41.

GENERAL MAINTENANCE INFORMATION

Exceptions

Some exceptions for specific vehicles and special applications are outlined below. In addition, you will find further information under *Exceptions* on page 47.

- **Engine oil and engine coolant - time and mileage based interval**

If you're unsure which maintenance schedule to follow, ask your Ford and Lincoln Mercury Dealership, or visit the Maintenance area of www.genuineservice.com.

Oils, Fluids and Flushing

In many cases, fluid discoloration is a normal operating characteristic and, by itself, does not necessarily indicate a concern or that the fluid needs to be changed. However, discolored fluids that also show signs of overheating and/or foreign material contamination should be inspected immediately by a qualified expert such as the factory-trained technicians at your Ford or Lincoln Mercury Dealership. Your vehicle's oils and fluids should be changed at the specified intervals or in conjunction with a repair. Flushing is a viable way to change fluid for many vehicle sub-systems during scheduled maintenance. It is critical that systems are flushed only with new fluid that is the same as that required to fill and operate the system, or using a Ford-approved flushing chemical.

Chemicals and Additives

Non-Ford approved chemicals or additives are not required for factory recommended maintenance. In fact, Ford Motor Company recommends against the use of such additive products unless specifically recommended by Ford for a particular application.

Your vehicle is very sophisticated and built with multiple complex performance systems. Every manufacturer develops these systems using different specifications and performance features. That's why it's important to rely on your Ford or Lincoln Mercury dealership to properly diagnose and repair your vehicle.



When planning your maintenance services, consider your Ford or Lincoln Mercury dealership for all your vehicle's needs.

6 Scheduled Maintenance

GENERAL MAINTENANCE INFORMATION

Get the most from your service and maintenance visits

There are a lot of reasons why visiting your Ford or Lincoln Mercury Dealership for all your service needs is a great way to help keep your vehicle running great.

Convenience

Many Dealerships have extended evening and Saturday hours to make your service visit more convenient. How's that for quality service?

Factory-trained Technicians

Ford and Lincoln Mercury service technicians participate in extensive factory-sponsored certification training to help them become experts on the operation of your vehicle. Ask your Dealership about the training and certification their technicians have received.

Genuine Ford and Motorcraft® Replacement Parts

Ford and Lincoln Mercury Dealerships use Ford and Motorcraft® branded replacement parts. These parts meet or exceed Ford Motor Company's specifications, and we stand behind them. Maintenance parts installed at your Ford or Lincoln Mercury dealership carry a nationwide, 12-month, 12,000-mile parts and labor limited warranty. Your dealer can give you details.

Value Shopping for Your Vehicle's Maintenance Needs

Your dealership recognizes the competitive landscape of maintenance and light repair automotive services. With factory-trained technicians and one-stop service for everything from routine maintenance like oil changes and tire rotations to your most complex needs, Ford and Lincoln Mercury Dealerships offer outstanding value.

OWNER CHECKS AND SERVICES

It is recommended that the following basic maintenance checks and inspections be performed at the designated time intervals. See your "Owner's Guide" for more information.

Check every month for all vehicles

- Check function of all interior and exterior lights.
- Check tires for wear and proper air pressure, including spare.
- Check engine oil fluid level.
- Check windshield washer fluid level.

Check every six months for all vehicles

- Check lap/shoulder belts and seat latches for wear and proper operation.
- Check that externally mounted spare tire is properly stowed (tight) (see your *Owner's Guide*).
- Check power steering fluid level, if equipped.
- Check washer spray, wiper operation, and clean all wiper blades (replace blades as necessary).
- Check parking brake for proper operation.
- Check and lubricate all hinges, latches, door check straps (see dealer) and outside locks.
- Check and lubricate upper and lower sliding door tracks, if equipped.
- Check and clean sliding door contact switches, if equipped.
- Check and lubricate door rubber weatherstrips.
- Check and clean body and door drain holes.
- Check safety warning lamps (brake, ABS, airbag, safety belt) for operation.
- Check engine cooling system level and strength.
- Check battery connections and clean if necessary.
- Check clutch fluid level, if equipped.

Retightening lug nuts

- On vehicles equipped with dual rear wheels, retighten the wheel lug nuts to the specified torque at 100 miles (160 km), and again at 500 miles (800 km) of new vehicle operation and after any wheel disturbance (tire rotation, changing a flat tire, wheel removal, etc.).
- Refer to *Wheel Lug Nut Torque Specification* in your *Owner's Guide* for the proper lug nut torque specification.

8 Scheduled Maintenance

KEEP IT GENUINE

Tires

BFGoodrich
Tires

Continental

DUNLOP DFE

GENERALTIRE

GOODYEAR

YOKOHAMA

HANKOOK

MICHELIN

PIRELLI

Republic

UNIROYAL
FOR EVERYTHING YOU VALUE

Keep It Genuine

Proper tire maintenance and replacement are critical to your vehicle's performance and helps keep you and your passengers safe. Only use replacement tires and wheels that are the same size, load index, speed rating and type (such as P-metric versus LT-metric or all-season versus all-terrain) as those originally provided by Ford. The recommended tire and wheel size may be found on either the Safety Compliance Certification Label or the Tire Label which is located on the B-Pillar or edge of the driver's door. If this information is not found on these labels then you should consult your Ford Dealer. Use of any tire or wheel not recommended by Ford can affect the safety and performance of your vehicle, which could result in an increased risk of loss of vehicle control, vehicle rollover, personal injury and death. Additionally the use of non-recommended tires and wheels could cause steering, suspension, axle or transfer case/power transfer unit failure. If you have questions regarding tire replacement, see an authorized dealer. When you need to replace your tires, please visit your Ford or Lincoln Mercury Dealership for name-brand tires and people who know your vehicle.

If your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.

Tires degrade over time depending on many factors such as weather, storage conditions, and conditions of use (load, speed, inflation, etc.) the tires experience throughout their lives. In general, tires should be replaced after 6 years, regardless of tread wear. However, heat caused by hot climates or frequent high loading conditions can accelerate the aging process and may require the tires to be replaced more frequently. You should replace your spare tire when you replace your road tires or after 6 years due to aging even if the tire has not been used.

Scheduled Maintenance 9

KEEP IT GENUINE

Batteries



The technicians at your Ford or Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft® Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national, 3-year, free replacement warranty and prorated-cost replacement thereafter for up to 100 months and unlimited mileage. Should your battery need to be replaced, please consider a Motorcraft® brand battery that meets your vehicle's Ford Motor Company specifications.

Brakes



Your Ford or Lincoln Mercury Dealership has the right brake parts for your vehicle and their factory-trained technicians know exactly how to install them. Ford Original Equipment and Motorcraft® replacement brake pads, shoes, rotors and drums meet the stringent standards of Ford Motor Company engineers, and they're also Federal Motor Vehicle Safety Standard (FMVSS) compliant. In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression. The right brake parts and installation are essential to proper brake system operation.

10 Scheduled Maintenance

KEEP IT GENUINE

Oil & Lubricants



Keep It Genuine

It is important to follow a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft® Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft® Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft® oil stands up to the tests of both Ford and independent engineers.

Collision

An accident is an upsetting experience and collision repair is often complicated and confusing. Here are a few pointers to help you better understand the collision repair process and make sure your vehicle is properly repaired with the right parts. Properly repairing your vehicle will help maintain its value.

Your rights as a consumer

As a consumer, you are within your rights to insist on original equipment replacement parts. These genuine parts are made by the manufacturer to meet stringent criteria for fit, finish, structural integrity, corrosion protection and dent resistance, just like the parts that were originally on your vehicle. Insist on genuine Ford replacement parts.


The collision shop

Many Ford and Lincoln Mercury Dealerships offer collision repair services. Ask your selling dealership about their capabilities to help with collision repair.

MULTI-POINT INSPECTION

Parts

Genuine Ford Collision Parts are designed, engineered, and warranted by Ford Motor Company. See your dealer for limited warranty details. They are manufactured to the same specifications as those on your vehicle when it was built. The right replacement parts will help maintain the value of your vehicle.

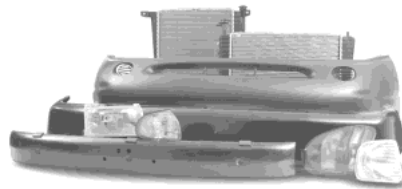


Ford recommended scheduled maintenance — In order to keep your vehicle running right, it is important to have the systems on your vehicle checked regularly. This can help identify potential issues and prevent major problems. Ford Motor Company recommends the following multi-point inspection be performed at every scheduled maintenance interval to help ensure your vehicle keeps running great.

MULTI-POINT INSPECTION - Recommended at every visit

- Check and top-up fluid levels: brake, coolant recovery reservoir, manual and automatic transmission (if equipped with an underhood dipstick), power steering (if equipped) and window washer
- Inspect tires for wear and check air pressure, including spare.
- Check exhaust system for leaks, damage, loose parts and foreign material.
- Check battery performance.
- Check operation of horn, exterior lamps, turn signals and hazard warning lights.
- Check radiator, coolers, heater and air conditioning hoses.
- Inspect windshield washer spray and wiper operation.
- Check windshield for cracks, chips and pitting.
- Inspect for oil and fluid leaks.
- Inspect engine air filter.
- Inspect half shaft dust boots, if equipped.
- Check shocks and struts and other suspension components for leaks and damage.
- Inspect steering and linkage.
- Inspect accessory drive belt(s).
- Inspect clutch operation, if equipped.

MULTI-POINT INSPECTION

Be sure to ask your Ford or Lincoln Mercury Dealership Service Advisor or Technician about the multi-point vehicle inspection. It's a comprehensive way to perform a thorough inspection of your vehicle. It's your checklist that gives you immediate feedback on the overall condition of your vehicle. You'll know what's been checked, what's okay, as well as those things that may require future or immediate attention. The multi-point vehicle inspection is one more way to keep your vehicle running great!



**GENUINE
PARTS & SERVICE**

Owner Advantage Rewards Member # _____
Rewards Service Balance _____

Multi-Point Inspection Report Card as Recommended by Ford Motor Company

Name: _____ Today's Date: _____ Mileage: _____
 E-Mod Address: _____ Mileage: _____

SCHEDULED MAINTENANCE (ITEMS DUE FOR SERVICING ON THIS VISIT)

ITEM	OK	NEEDS ATTENTION
Oil	<input type="checkbox"/>	<input type="checkbox"/>
Engine Air Filter	<input type="checkbox"/>	<input type="checkbox"/>
Engine Oil Filter	<input type="checkbox"/>	<input type="checkbox"/>
Engine Coolant	<input type="checkbox"/>	<input type="checkbox"/>
Radiator Filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil Change	<input type="checkbox"/>	<input type="checkbox"/>
Spark Plugs	<input type="checkbox"/>	<input type="checkbox"/>
Tire Rotation	<input type="checkbox"/>	<input type="checkbox"/>
Transmission Filter	<input type="checkbox"/>	<input type="checkbox"/>
Transmission Fluid	<input type="checkbox"/>	<input type="checkbox"/>

*This is only a partial list of vehicle maintenance items and is NOT all-inclusive. Please consult your Owner's Manual or visit www.genuineparts.com for vehicle specific maintenance requirements.

CHECK FLUID LEVELS AND FILL

Oil and/or fluid leaks

WATER Full Low

COOLANT Full Low

POWER STEERING Full Low

WASHER FLUID Full Low

 
BATTERY

State of Health: _____ Condition of Terminals: _____

Factory spec cold cranking amps: _____ Actual cold cranking amps: _____

EXTENSION BODY

Note any existing exterior body damage or defects on diagram:



SYNC VEHICLE HEALTH REPORT (VHR)

VHR Adhesion: Yes No N/A

Checked and OK at this time May require future attention Requires immediate attention

CHECK FOLLOWING SYSTEMS/COMPONENTS

BRAKE SYSTEM

Brake system (including lines, hoses, and parking brake)

Steering and suspension

Shock absorbers and other suspension components for leaks and/or damage

Steering, steering knuckles and ball joints

EXHAUST SYSTEM

Exhaust system (leaks, damage, loose parts)

TRANSMISSION AND DRIVE AXLE

Check operation of equipment

Constant velocity (CV) drive axle boots (if equipped)

Drive shaft, transmission (if not CVT) (leaks, if equipped) and lubricate (as needed)

LIGHTS/BLIND SPOT MIRROR/SHIELD

Operation of lights, license lights, exterior lamps, turn signals, hazard and trailer lamps

Windshield wiper spray, wiper operation and wiper blades

Windshield for cracks, chips and pitting

BELT/NOSE MOUNTS

HVAC system and hoses (leaks for leaks and/or damage)

Engine Cooling system, radiator, hoses and clamps

Accessory drive belts

BRAKE LINING 24 Series or 432" to 752" (24) or 432" to 752" (24) or 432" to 752" (24) or 432" to 752" (24)

TIRE TREAD 432" to 752" (24) or 432" to 752" (24) or 432" to 752" (24) or 432" to 752" (24)

	LEFT FRONT	RIGHT FRONT
Tire Tread	<input type="checkbox"/> The Tread Depth _____ /32"	<input type="checkbox"/> The Tread Depth _____ /32"
Wear Pattern	<input type="checkbox"/> The Wear Pattern Damage _____	<input type="checkbox"/> The Wear Pattern Damage _____
Pressure	<input type="checkbox"/> The Pressure - set to factory recommended PSI _____	<input type="checkbox"/> The Pressure - set to factory recommended PSI _____
Brake Lining	<input type="checkbox"/> Brake Lining _____ /32"	<input type="checkbox"/> Brake Lining _____ /32"

TIRE WEAR INDICATES:

	LEFT REAR	RIGHT REAR
Tire Tread	<input type="checkbox"/> The Tread Depth _____ /32"	<input type="checkbox"/> The Tread Depth _____ /32"
Wear Pattern	<input type="checkbox"/> The Wear Pattern Damage _____	<input type="checkbox"/> The Wear Pattern Damage _____
Pressure	<input type="checkbox"/> The Pressure - set to factory recommended PSI _____	<input type="checkbox"/> The Pressure - set to factory recommended PSI _____
Brake Lining	<input type="checkbox"/> Brake Lining _____ /32"	<input type="checkbox"/> Brake Lining _____ /32"

Comments: _____

Service Advisor: _____ Customer Signature: _____

Technician: _____

12-XXXXXXXX

2111006 Rev. 10/08 ©2008 Ford Motor Company. All Rights Reserved. Customer Copy

Keep It Genuine

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

7,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

15,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



22,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

30,000 miles

- Change engine oil and replace oil filter
- Inspect automatic transmission fluid level on vehicles if equipped with dipstick. Consult your dealer for particular requirements.
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series and Transit Connect)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:

37,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

Oil & Lubricants

It is important to stick to a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft® Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft® Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft® oil stands up to the tests of both Ford and independent engineers.



Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

Batteries

The technicians at your Ford and Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft® Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national 3 year, free-replacement and prorated-cost thereafter up to 100 months with unlimited mileage. Should your battery need to be replaced, consider any one of the batteries that bear the Motorcraft® name.



45,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

18 Scheduled Maintenance

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

52,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

60,000 miles

- Change engine oil and replace oil filter
- Change automatic transmission fluid and filter on all vehicles equipped with the TorqShift transmission. Consult your dealer for your particular requirements.
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series and Transit Connect)
- Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

Brakes

Technicians at your Ford or Lincoln Mercury dealer can install the right brake parts for your vehicle. Ford Original Equipment and Motorcraft® replacement brake pads, shoes, rotors, and drums meet the stringent standards of Ford Motor Company engineers.

In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression while being Federal Motor Vehicle Safety Standard (FMVSS) compliant. The right brake parts and repair work are essential to ensure your brake system operates as it should.



67,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

75,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:

82,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:

Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

90,000 miles

- Change engine oil and replace oil filter
- Inspect automatic transmission fluid level on vehicles if equipped with dipstick. Consult your dealer for your particular requirements.
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series and Transit Connect)
- Replace spark plugs
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect accessory drive belts
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:	P&A CODE:
DATE:	MILEAGE:

97,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:	P&A CODE:
DATE:	MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

105,000 miles

- Change engine oil and replace oil filter
- Change manual transmission fluid (except Escape)
- Replace cabin air filter (if equipped)
- Change rear axle fluid only on vehicles equipped with DANA axles (see Special Operating Conditions on page 41 and Exceptions on page 47)
- Change engine coolant (see Engine Coolant Change Interval on page 6 and Coolant Change Record on page 48)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:	P&A CODE:
DATE:	MILEAGE:

**Normal Schedule
Trucks, Fullsize
Vans & SUVs**

112,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:	P&A CODE:
DATE:	MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

120,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filters (if equipped)
- Replace engine air filter
- Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series and Transit Connect)
- Change automatic transmission fluid and filter on all vehicles equipped with the TorqShift transmission. Consult your dealer for your particular requirements.
- Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect accessory drive belts
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:
DATE:

P&A CODE:
MILEAGE:

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

127,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

135,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

142,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

150,000 miles

- Change engine oil and replace oil filter
- Change engine coolant (see Engine Coolant Change Interval on page 6 and Coolant Change Record on page 48)
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series and Transit Connect)
- Change automatic transmission fluid and filter (filter not required on 6F35). (Except vehicles equipped with the TorqShift transmission).
- Change manual transmission fluid
- Change rear axle lubricant on all rear wheel drive (RWD) vehicles (see pages 41 and 47).
- Change transfer case fluid (4x4 only)
- Change front differential fluid (4x4 only)
- Replace wheel bearings (if non-sealed bearings)
- Replace accessory drive belt(s) if not replaced in the last 100,000 miles (160,000 km)
- Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)
- Torque the rear U-bolts (Transit Connect only)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect and lubricate 4x4 front axle U-joints
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:


Normal Schedule
Trucks, Fullsize
Vans & SUVs

NORMAL SCHEDULE TRUCKS, FULLSIZE VANS & SUVs

Brakes

Technicians at your Ford or Lincoln Mercury dealer can install the right brake parts for your vehicle. Ford Original Equipment and Motorcraft® replacement brake pads, shoes, rotors, and drums meet the stringent standards of Ford Motor Company engineers.

In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression while being Federal Motor Vehicle Safety Standard (FMVSS) compliant. The right brake parts and repair work are essential to ensure your brake system operates as it should.

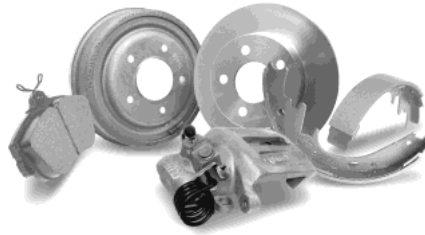

NORMAL SCHEDULE CARS & CUVs

7,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

15,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



22,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

NORMAL SCHEDULE CARS & CUVs

30,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect transmission fluid level (if equipped with an underhood dipstick).
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

37,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

45,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect automatic transmission fluid level (if equipped with an underhood dipstick)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Batteries

The technicians at your Ford and Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft® Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national 3 year, free-replacement and prorated-cost thereafter up to 100 months with unlimited mileage. Should your battery need to be replaced, consider any one of the batteries that bear the Motorcraft® name.



NORMAL SCHEDULE CARS & CUVs

52,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

60,000 miles

- Change engine oil and replace oil filter
- Replace climate-controlled seat filter (if equipped)
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect transmission fluid level (if equipped with an underhood dipstick).
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: _____ P&A CODE: _____
 DATE: _____ MILEAGE: _____

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

67,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

75,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect transmission fluid level (if equipped with an underhood dipstick)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

82,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

34 Scheduled Maintenance

NORMAL SCHEDULE CARS & CUVs

90,000 miles

- Change engine oil and replace oil filter
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace cabin air filter (if equipped)
- Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)
- Replace spark plugs
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect accessory drive belt(s)
- Inspect transmission fluid level (if equipped with an underhood dipstick).
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

97,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

105,000 miles

- Change engine oil and replace oil filter
- Change engine coolant (see Engine Coolant Change Interval on page 6 and Engine Coolant Change Record on page 48)
- Replace cabin air filter (if equipped)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect transmission fluid level (if equipped with an underhood dipstick)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

112,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

NORMAL SCHEDULE CARS & CUVs

120,000 miles

- Change engine oil and replace oil filter
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace cabin air filter (if equipped)
- Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect accessory drive belt(s)
- Inspect transmission fluid level (if equipped with an underhood dipstick).
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#: P&A CODE:
DATE: MILEAGE:

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

Oil & Lubricants

It is important to stick to a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft® Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft® Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft® oil stands up to the tests of both Ford and independent engineers.



127,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

NORMAL SCHEDULE CARS & CUVs

135,000 miles

- Change engine oil and replace oil filter
- Replace cabin air filter (if equipped)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Inspect transmission fluid level (if equipped with an underhood dipstick)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

142,500 miles

- Change engine oil and replace oil filter
- Inspect cabin air filter (if equipped)
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

Normal Schedule
Cars & CUVs

NORMAL SCHEDULE CARS & CUVs

150,000 miles

- Change engine oil and replace oil filter
- Change engine coolant (see Engine Coolant Change Interval on page 6 and Engine Coolant Change Record on page 48)
- Change automatic transmission fluid
- Replace automatic transmission fluid filter (except 5F55, 6F35 and AWF-21 transaxles)
- Change manual transmission fluid
- Replace rear axle lubricant on all rear wheel drive (RWD) vehicles (see pages 41 and 47).
- Replace climate-controlled seat filter (if equipped)
- Replace engine air filter
- Replace cabin air filter (if equipped)
- Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)
- Replace accessory drive belt(s) if not replaced in the last 100,000 miles (160,000 km)
- Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with grease fittings)
- Inspect engine cooling system and hoses
- Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.
- Inspect half shaft boots (if equipped)
- Inspect exhaust system and heat shields
- Rotate tires, inspect tires for wear and measure tread depth
- Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
- Perform multi-point inspection (recommended)

DEALER VALIDATION:

RO#:

P&A CODE:

DATE:

MILEAGE:

SPECIAL OPERATING CONDITIONS

Items Needing Special Attention

If you operate your Ford/Lincoln/Mercury vehicle **primarily** in one of the more demanding **Special Operating Conditions** listed below, you will need to have some items maintained more frequently. If you only **occasionally** operate your vehicle under these conditions, it is not necessary to perform the additional maintenance. For specific recommendations, see your Ford or Lincoln Mercury Dealership Service Advisor or Technician.

Towing a trailer or using a camper or car-top carrier

- | | |
|---|---|
| Inspect frequently, service as required. | – Inspect and lubricate U-joints.
– See axle maintenance items under <i>Exceptions</i> . |
| Every 5,000 miles | – Rotate tires, inspect tires for wear and measure tread depth.
– Inspect the wheels and related components for abnormal noise, wear, looseness or drag. |
| Every 5,000 miles or 6 months | – Change engine oil and replace oil filter.
– Inspect and lubricate U-joints. |
| Every 30,000 miles | – Change automatic transmission fluid (not required on 6R60/6R80/TorqShift® transmissions).
– Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings are used). |
| Every 60,000 miles | – Change transfer case fluid.
– Change manual transmission fluid. |

Special Operating
Conditions &
Exceptions

SPECIAL OPERATING CONDITIONS

Extensive idling and/or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, patrol car or livery

- Inspect frequently, service as required** – Replace cabin air filter.
- Every 5,000 miles** – Inspect brake system.
– Rotate tires, inspect tires for wear and measure tread depth.
– Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
– Lubricate control arm and steering ball joints (if equipped with grease fittings).
- Every 5,000 miles or 6 months** – Inspect and lubricate U-joints.
- Every 5,000 miles, 6 months or 200 hours of engine operation** – Change engine oil and replace oil filter.
- Every 15,000 miles** – Replace fuel filter (Crown Victoria, Grand Marquis, Town Car, Mustang, Ranger, F-Super Duty, Expedition EL and Navigator EL).
- Every 30,000 miles** – Change automatic transmission fluid (not required on 6R60/6R80/TorqShift® transmissions).
– Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings are used).
- Every 60,000 miles** – Replace spark plugs.
– Change transfer case fluid.

SPECIAL OPERATING CONDITIONS

Crown Victoria Police Interceptor & Taxi, and Executive Series Town Car equipped with Engine Idle Hour Meter

Inspect frequently, service as required	– Replace cabin air filter (if equipped).
Every 5,000 miles	– Inspect brake system. – Rotate tires, inspect tires for wear and measure tread depth. – Inspect the wheels and related components for abnormal noise, wear, looseness or drag. – Lubricate control arm and steering ball joints (if equipped with grease fittings).
Every 5,000 miles or 6 months	– Inspect and lubricate U-joints.
Every 5,000 miles, 6 months or as indicated by time/mileage calculation	– Change engine oil and replace oil filter (see description below).
Every 15,000 miles	– Replace fuel filter.
Every 30,000 miles	– Change automatic transmission fluid.
Every 60,000 miles	– Replace spark plugs.

ENGINE IDLE HOUR METER (IF EQUIPPED):

Your vehicle may be equipped with an idle meter to indicate how much time the vehicle is idling in P (Park) or N (Neutral). The meter is incorporated with the vehicle odometer. Depressing the odometer-reset button once will display the trip odometer (miles followed by a "T" for trip odometer). Depressing the odometer-reset button a second time will display the idle meter (hours followed by an "H" for hours). The idle meter only accumulates time when the vehicle is in P (Park) or N (Neutral). Displayed time is cumulative for the vehicle. **It cannot be reset to zero.** Police/Fleet vehicles often experience long periods of idling, during which engine oil will continue to break down but mileage is not accumulated on the odometer.

To assist fleet managers in maintaining proper oil change intervals, the idle meter will help determine when an oil change is required. For every hour that the vehicle idles, it has accumulated the equivalent of approximately 33 miles of driving. Using the combination of the vehicle odometer and idle meter allows the fleet manager to better determine when the oil needs to be changed

Engine idle hour meter calculation:

Idle hours x 33 = miles equivalency

Miles driven + miles equivalency = oil change interval

Example: When the odometer has accumulated 3,000 miles and the idle meter shows 61 hours, a 5,000 mile oil change interval will have been reached: 3,000 road miles + (61 idle hours x 33 miles/idle hour) = 5,013 miles.

Special Operating
Conditions &
Exceptions

SPECIAL OPERATING CONDITIONS

Operating in dusty conditions such as unpaved or dusty roads

- | | |
|--|---|
| Inspect frequently, service as required | – Replace engine air filter.
– Replace cabin air filter (if equipped). |
| Every 5,000 miles | – Rotate tires, inspect tires for wear and measure tread depth.
– Inspect the wheels and related components for abnormal noise, wear, looseness or drag. |
| Every 5,000 miles or 6 months | – Change engine oil and replace oil filter.
– Inspect and lubricate U-joints. |
| Every 15,000 miles | Replace fuel filter (Crown Victoria, Grand Marquis, Town Car, Mustang, Ranger, F-Super Duty, Expedition EL and Navigator EL). |
| Every 30,000 miles | – Change automatic transmission fluid (not required on 6R60/6R80/TorqShift® transmissions).
– Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings are used). |
| Every 50,000 miles | – Change manual transmission fluid.
– Change rear axle lubricant (E-450 and F-450/550 only). |
| Every 60,000 miles | – Change transfer case fluid. |

SPECIAL OPERATING CONDITIONS

Off-road operation

- Inspect frequently, service as required** – Replace cabin air filter (if equipped).
– Inspect and lubricate steering linkage ball joints and U-joints (if equipped with grease fittings).
- Every 5,000 miles or 6 months** – Change engine oil and replace oil filter.
– Rotate tires, inspect tires for wear and measure tread depth.
– Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
- Every 30,000 miles** – Change automatic transmission fluid (not required on 6R60/6R80/TorqShift® transmissions).
– Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings are used).
- Every 50,000 miles** – Change manual transmission fluid.
– Change rear axle lubricant (E-450 and F-450/550 only).
- Every 60,000 miles** – Change transfer case fluid.

Use of E85 50% of the time or greater (flex fuel vehicles only)

- Every 5,000 miles** – Rotate tires, inspect tires for wear and measure tread depth.
– Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
- Every 3,000 miles** – If ran exclusively on E85, fill the tank full with regular unleaded fuel.
- Every 5,000 miles or 6 months** – Change engine oil and replace oil filter.

Special Operating
Conditions &
Exceptions

SPECIAL OPERATING CONDITIONS

Special Operating Conditions Log

DEALER VALIDATION:	DEALER VALIDATION:
RO#: P&A CODE: DATE: MILEAGE:	RO#: P&A CODE: DATE: MILEAGE:
DEALER VALIDATION:	DEALER VALIDATION:
RO#: P&A CODE: DATE: MILEAGE:	RO#: P&A CODE: DATE: MILEAGE:
DEALER VALIDATION:	DEALER VALIDATION:
RO#: P&A CODE: DATE: MILEAGE:	RO#: P&A CODE: DATE: MILEAGE:
DEALER VALIDATION:	DEALER VALIDATION:
RO#: P&A CODE: DATE: MILEAGE:	RO#: P&A CODE: DATE: MILEAGE:
DEALER VALIDATION:	DEALER VALIDATION:
RO#: P&A CODE: DATE: MILEAGE:	RO#: P&A CODE: DATE: MILEAGE:

EXCEPTIONS

In addition, there are several exceptions to the Normal Schedule. They are listed below:

Normal Vehicle Axle Maintenance

- Rear axles and power take-off (PTO) units containing synthetic lubricant and light duty trucks equipped with Ford-design axles are lubricated for life. These lubricants are not to be checked or changed unless a leak is suspected, service is required or the axle assembly has been submerged in water. The axle and PTO lubricant should be changed anytime the axle and PTO have been submerged in water. During extended trailer tow operation above 70°F ambient and wide open throttle for extended periods above 45 mph, non-synthetic rear axle lubricants should be replaced every 3,000 miles or 3 months, whichever occurs first. The 3,000 mile lube change interval may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number FITZ-19580-B or equivalent. Add friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles (see *Owner's Guide* for quantity). The axle lubricant should be changed anytime an axle has been submerged in water.

Police/Taxi/Livery Vehicle Axle Maintenance

- Replace rear axle lubricant every 100,000 miles. Rear axle lubricant change may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number FITZ-19580-B or equivalent. Add four ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles. The axle lubricant should be changed anytime the axle has been submerged in water.

E-450 and F-450/550 Axle Maintenance

- Replace rear axle lubricant every 100,000 miles under normal driving conditions on all E-450 and F-450/550 applications. For E-450 and F-450/550 vehicles operated at or near maximum Gross Vehicle Weights, the rear axle lubricant should be replaced every 50,000 miles. In addition, this 50,000 mile schedule should be observed when the vehicles are operated under the Special Operating Conditions, where noted, on page 41.

California Fuel Filter Replacement

- If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. Ford Motor Company, however, urges you to have all recommended maintenance services performed at the specified intervals and to record all vehicle service.

Class A Motorhome

- Every two years - Change brake fluid
- Every 60,000 miles - Change automatic transmission fluid

Special Operating
Conditions &
Exceptions

Scheduled Maintenance 47

ENGINE COOLANT CHANGE RECORD

Current mileage goes here => Add 45,000 miles to the current miles + 45,000 Next change due at this mileage => Or Today's date goes here => Add 3 years + 00 / 00 / 03 Date of next change => whichever comes first	Dealer Stamp P & A CODE R.O.#
--	---

Current mileage goes here => Add 45,000 miles to the current miles + 45,000 Next change due at this mileage => Or Today's date goes here => Add 3 years + 00 / 00 / 03 Date of next change => whichever comes first	Dealer Stamp P & A CODE R.O.#
--	---

Current mileage goes here => Add 45,000 miles to the current miles + 45,000 Next change due at this mileage => Or Today's date goes here => Add 3 years + 00 / 00 / 03 Date of next change => whichever comes first	Dealer Stamp P & A CODE R.O.#
--	---

Current mileage goes here => Add 45,000 miles to the current miles + 45,000 Next change due at this mileage => Or Today's date goes here => Add 3 years + 00 / 00 / 03 Date of next change => whichever comes first	Dealer Stamp P & A CODE R.O.#
--	---